

Detailed instructions may be found in your instruction booklet.

To Add, Change, or Delete a user code:

Step 1:

Press the following buttons: * **5 Master Code** (program light should start to flash. If not, then another access code is programmed as the "master code." Use the other code instead.)

Step 2:

Enter the user location: **01 to 32** (of the code you wish to add/change/delete.) See "Choosing a User Location."

Step 3:

Use digits 0 through 9 only for programming codes.

To Add: Enter four-digit code (Note: Once the four digit code has been entered, the keypad sounder will beep 3 times.)

To Change: Enter new four-digit code

To Delete: Press * (pressing * after choosing the "User Location" will delete any existing user code in that "location") (Note: Once * has been entered, the keypad sounder will beep 3 times.)

Step 4:

Press: # #

To Verify Process:

To verify if process has been completed properly: Try using new/deleted code to arm the system. If adding a code: the system should arm, if deleting a code: the system should not arm. If desired outcome was not achieved, press # # and try above process again.

Choosing a User Location:

If there are additional user codes programmed (besides the master code-location 40), zone numbers will illuminate reflecting their programmed location. Each additional user must be assigned a "location" 01 through 32. For example, if there is a user in addition to the "master code" (location 40) zone number 1 will illuminate. If there are 2 users in addition to the "master code" than zone numbers 1 & 2 will illuminate.