

TO SET TIME AND DATE

- Press *** 6** and enter the 4-digit Master Code
- 1 long beep indicates an error, press **#** and enter the Master Code again
- After 4 short beeps, press **1** then 10 digits, 2 each for the hour, minute, month, day and year (HH:MM MM/DD/YY)
 - Use a 24-hour clock (e.g. 8:30 pm = 20:30)
 - Use 2 digits each to indicate the month and day (e.g. March 8 = 03 08)
 - Only enter the last 2 digits of any given year (e.g. 2007 = 07)